

Danfoss Module Replacement Instructions

Remove wires from the terminals on the front of the module. (For models with a PCB Board - remove the board also.)

Locate the Philips head screw and turn clockwise to loosen the module.



Twist the module to the left to remove it from the module bracket.



Use a screwdriver to pry the 3-prong plug evenly towards the left away from the side of the compressor.



To install new module: Push the 3-prong plug evenly onto the compressor. Hook the module onto the back of the bracket first and then snap into place. Turn the Philips head screw counter clockwise to secure the module. Replace (PCB Board) and the wires to their original locations on the module.