

IR33 PROGRAMMING

Enter the password for programming the head.

Hold the program (PRG) and select (SET) buttons at the same time for 5 seconds. Use the ↑ and ↓ arrows to navigate to the #77. Then press SET to accept. You are now in programming mode.

C-O=1 (To set mode of operation – to direct)

Use the ↑ and ↓ arrows to navigate to C-O. Press SET to accept. Use the ↑ and ↓ arrows to navigate to the #1. Press SET to accept. This will bring you back to C-O.

C-13=0 (To change type of probe.)

Use the ↑ and ↓ arrows to navigate to C-13. Press SET to accept. Use the ↑ and ↓ arrows to navigate to the #0 (NTC Probe). Press SET to accept. This will bring you back to C-13.

C-18=1 (To change the head from centigrade to Fahrenheit.)

Use the ↑ and ↓ arrows to navigate to the C-18. Press SET to accept. Use the ↑ and ↓ arrows to navigate to the #1 for Fahrenheit. Press SET to accept. This will bring you back to C-18.

P-1=6 (To set the degrees of differential.)

Use the ↑ and ↓ arrows to navigate to the P-1. Press SET to accept. Use the ↑ and ↓ arrows to navigate to the #6. Press SET to accept. This will bring you back to P-1.

To exit programming mode and save changes. Press the PRG button and hold for 5 seconds. This will take you out of programming mode and save all changes. The temperature will again be displayed.

ST1=20 (To set the set point temperature.)

Hold the SET button. Use the ↑ and ↓ arrows to navigate to the #20. Press SET to accept.